

**T**he Burr Mobile-Lift Outside Model for conventional vehicles and motorhomes offers you the ultimate in quiet convenience and independence. It requires no disassembly of your 3-or 4-wheel electric scooter or

wheelchair — simply drive it on, attach the safety harness, and push the switch. The Mobile-Lift raises and locks any scooter in place on the back of your vehicle in just 60 seconds so you can be on your way.

# MOBILE-LIFT

OUTSIDE MODEL






# The Latest In Scooter Lift Technology




The Mobile-Lift Outside Model folds up out of the way when not in use. Just unfasten the lock-up strap and lower platform when ready to use.



Once your scooter is on the platform and the brake is locked, push the switch to raise and stop halfway. Attach the adjustable safety belts. Finish raising until the Mobile-Lift automatically locks into place. Then just drive away!

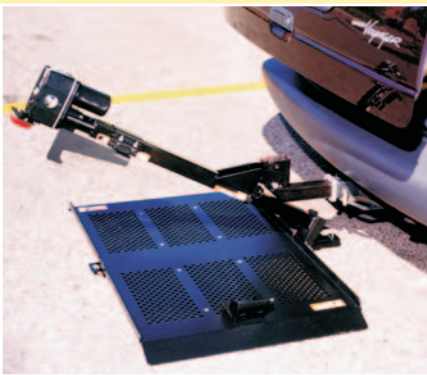

The unit folds down for access to the car's trunk, or the rear of station wagons, vans, or pick-up trucks.

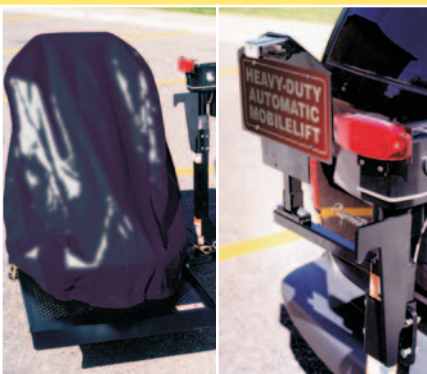

Optional Travel Cover (No. 26116 scooter cover and No. 26117 wheelchair cover) and License Plate Bracket (No. 25955) are available.

## Loading Without Lifting Or Disassembly At The Flick Of A Switch

With the Burr Mobile-Lift, there's no more time-consuming assembly or disassembly, no more cumbersome lifting, or cluttered trunk. And the Mobile-Lift allows you to drive on or off in just 60 seconds!

The Burr Mobile-Lift Regular Model is a handsome addition to your automobile that can accommodate 3- and 4-wheel scooters, as well as 4-wheel wheelchairs up to 300 pounds. The Mobile-Lift's high-quality performance has been designed specifically for your comfort and convenience, with safe ease of operation, no maintenance, and simple installation. The strong, 12-volt motor is all steel with hardened, permanently lubricated gears.

New **Square Post** provides maximum strength and stability.

The all-aluminum 26" x 40" (plus entry ramp) platform is lightweight and maintenance-free. We've even added two night "Liflites" for evening use and a D.O.T.-approved center brake light to ensure safe transportation... and mobility whenever you need it.

Attractively finished in a beautiful black powder coat finish, the Mobile-Lift fights corrosion in any environment and blends well with any vehicle finish.

## Installation Information

The Burr Mobile-Lift can be mounted on your automobile by any local trailer hitch installer. It simply bolts onto a class 3 receiver hitch, and weighs only 62 pounds! (#19675)

It comes complete with simple wiring and installation instructions, owner's manual, and one-year limited factory warranty. Attractive waterproof covers for the Mobile-Lift are also available.



Hi-Torque Acme Actuator with an easy-to-operate switch, brake light, and built-in night lights. Emergency crank-through handle allows operation even when the battery fails.

### No. 19675 Regular 18" Model Mobile-Lift

Full 18" vertical lift for installation on regular vans and cars.

### No. 20565 Motorhome 24" Model Mobile-Lift

Full 24" vertical lift for motorhomes that have an extra high hitch receiver.

### No. 24770 "Big Tray" 24" Mobile-Lift

Full 24" vertical lift. Suitable for installation on regular vans, cars and motorhomes.

Tray size: 30" x 50".

## EXCELLENT DEALER WARRANTY AND PROTECTION PROGRAM



Manufacturer of dependable actuator systems for thirty years.

**Burr Engineering Company**  
730 E. Michigan Ave., P.O. Box 460  
Battle Creek MI 49016-0460  
TEL: 1-800-537-9940 or  
269-966-3122

FAX: 269-965-2389

[www.burractuators.com](http://www.burractuators.com)

Available in Canada from:  
**H&H Braund Manufacturing Company, Ltd.**  
183 Durham Street West  
Mount Forest, Ontario, Canada N0G 2L1  
TEL: 1-519-323-2021 or 1-519-323-2022  
FAX: 1-519-323-2890

FORM NO. 26227 A